

SONNETEER

Byron

CD Player
Instruction Manual

Introduction

Thank you for purchasing your new Sonneteer Byron, a multi-bit Delta Sigma CD player with digital output (for future upgradeability) which is fully remote controllable. For your safety and proper operation of your CD player, please take time to read this manual fully before installing and operating your system.

Safety notice:

- **DANGER! HIGH VOLTAGE! RISK OF ELECTRIC SHOCK!**
- Lethal voltages are present inside the unit. Always unplug the amplifier completely from mains outlet before connecting or disconnecting anything.
- No user-serviceable parts inside. Please refer all servicing to qualified service agents.
- Never expose the unit to water, moisture, and extreme cold or direct sunlight.
- It is advisable to unplug the unit from the mains when a thunderstorm is expected.

Cleaning your CD Player:

- Always unplug the unit from mains before cleaning the unit.
- Do not use solvents of any kind to clean the unit, only use a soft-dry cloth.

Sonneteer reserves the right to change specifications without prior notice.


This box contains the following:



CD Player
(with mains cable)




Remote handset
(with batteries)

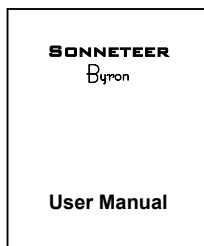

Instruction
Manual

Front panel controls and features:

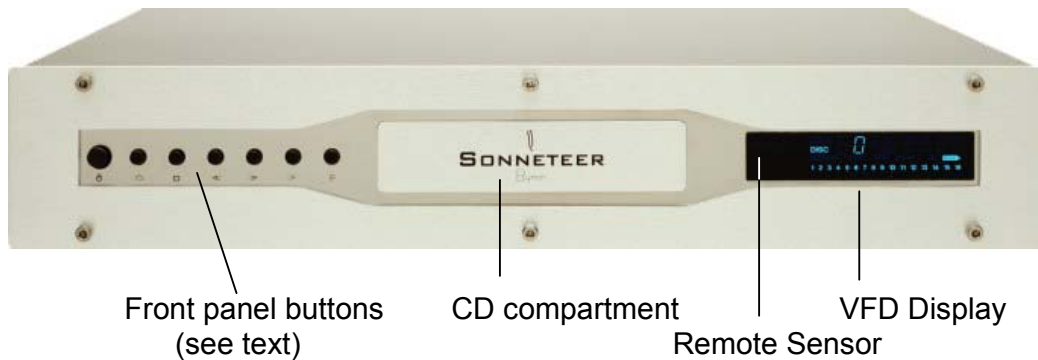

The new Byron CD player has the following features:

Hi-Fidelity multi-bit Delta Sigma converter
Separate power supply for the CD and the DAC
Fully programmable play back features.



Front panel controls:

- | | |
|----|----------------|
| | Pause |
| ▷ | Play |
| >> | Next Track |
| << | Previous Track |
| □ | Stop |
| △ | Open / Close |
| ⏻ | Power OFF |

Rear Panel connections:



Mains Power: Main power on/off switch for unit.

AC IN: Connect to mains outlet.
(Do this after all connections to the CD player have been made and checked)

Right Output: Connect this output to your amplifier CD Right Input.

Left Output: Connect this output to your amplifier CD Left Input.

Digi Out: Connect this to your separate D to A converter if required.

Using your Remote Control:

Standby: Puts CD Player into standby mode.

SCAN: Plays the first 10 seconds of each track automatically.

DISC: Opens and Closes the CD drawer.

Prog (Program): you can program the playback sequence for up to 30 tracks of your CD. First **press the PROG** key then select the desired track using the **PREV** or **NEXT** button and then store it pressing the **PROG** key. You can use numeric buttons to enter the track number also.

To play your programmed sequence press **PLAY**. Pressing **PLAY** again will restart the playback sequence. To **CLEAR** the programmed sequence press **STOP** twice in Play mode or once in Stop.

A+B: You can repeat any sections of a track. Press **ONCE** to select the start of the section and press **a+b AGAIN** to end the section. Press **STOP, PREV** or **NEXT** to cancel.

Repeat: repeat a track or disc or a programmed playback sequence. Press twice to repeat a track

Shuffle: Plays the CD in random order



Numeric Buttons: Selects the track number directly or in Program mode.

TIME: Toggles lapsed and remaining time on disc.

Fast Forward

Fast Rewind

Next Track (skip)

Previous Track

**Play
STOP
Pause**

Note:

If the remote fails to operate the CD player please check the conditions of the batteries and also that the emote sensor has not been obstructed

Technical specification:

| | |
|-----------------------|-----------------------|
| Frequency response | 2Hz - 20kHz |
| Dynamic range | 96dB |
| Analogue output level | 1.95V |
| DAC | Delta Sigma |
| Digital output | S/PDIF |
| Size (mm) | 434 x 74 x 280 |
| Fuse Values: | |
| UK/Europe/Australasia | 230V/240V, T 1.25 Amp |
| USA/Canada | 110V/120V, T 2.0 Amp |

SONNETEER reserves the right to change specifications without prior notice.

If a fault occurs, please refer to your dealer. Do not attempt to repair the unit yourself.



P.O. Box 163C, Esher, Surrey, KT10 0YH, England.
www.sonneteer.co.uk